

Saline HS – Classroom Audio Video Connections at Teacher Workstations

#1 – Connects from the VGA connector on the back of the workstation monitor to the wall plate VGA Hosa VGA Cable (MIDI & Computer Cables) (vga310): Overview



#2 – Connects from Green female speaker jack on back of CPU to RCA “Aux/CD” jacks on back of Amp
Hosa CMR210
10' TRS 3.5mm - (2) RCA Cable



#3 – Coax Cable (does not have twist noted in picture) – F Type coax on wall plate to Coax In on Amp
Hosa VDF110 Video Coax Cable #2259



#4 – This has the Grey & Red RCA at one end and 2 bare wires on other end. Connect Red RCA to Right RCA receptacle on wall plate & Grey RCA to Left RCA receptacle on wall plate. Connect shielded bare wire to “70V” screw on amp and connect unshielded bare wire to “Com” screw on amp
Hosa CRA204G
13.2' Dual RCA-RCA Gold Cable



#5 – Connect from Composite Video receptacle on wall plate to “Video” under “Output” on DVD / VCR
Hosa CRA110
10' RCA - RCA Cable



#6 – Custom cable though 3 bare wires on end (not as shown below). Connect Red RCA to “Audio R” under “Output” on DVD / VCR & Grey RCA to “Audio L”. Black bare wire to “G” under “Mic-1” on Amp; Blue wire to “Com”; Red wire to “Hot”

